

Restaurant Application

Quick Reference Guide



VeriFone® Omni 3700 & Vx Series



Quick Reference Guide

Restaurant Application

Credit Sale

To scroll menu, press [↓] until desired option appears.

- > Swipe customer card
- > Select [CREDIT], if prompted
- > Input last 4 digits of account # and press [ENTER]
- > Input server ID and press [ENTER], if prompted
- > Input \$ amount and press [ENTER]
- > Print customer copy – [F1] for Yes or [F2] for No

Debit Sale

To scroll menu, press [↓] until desired option appears.

- > Swipe customer card
- > Select [DEBIT]
- > Input server ID and press [ENTER], if prompted
- > Input \$ amount and press [ENTER]
- > Input cash back amount and press [ENTER] (only if enabled)
- > Input tip amount and press [ENTER]
- > Cardholder enters PIN and presses [ENTER]
- > Print customer copy – [F1] for Yes or [F2] for No

Reprint

- > Press [REPRINT]
- > Choose from these options: [LAST/ANY]
- > If LAST is selected:
 - The last receipt prints

- > If ANY is selected:
 - Input invoice # and press [ENTER]
 - The selected receipt prints

Manual Sale

To scroll menu, press [↓] until desired option appears.

- > Press [F2] [SALE]
- > Input account # and press [ENTER]
- > Select [CREDIT], if prompted
- > Input expiration date (MMYY) and press [ENTER]
- > Card present – [F1] for Yes or [F2] for No
- > If YES, imprint card and press [ENTER]
- > Input server ID and press [ENTER], if prompted
- > Input \$ amount and press [ENTER]
- > Input zip code and press [ENTER], if prompted
- > If NO, input server ID and press [ENTER], if prompted
- > Input \$ amount and press [ENTER]
- > Input V-Code and press [ENTER]
- > If no code entered: Code present? Select [NO] [XREAD]
- > Input address and press [ENTER], if prompted
- > Input zip code and press [ENTER], if prompted
- > Print customer copy – [F1] for Yes or [F2] for No

Force

To scroll menu, press [↓] until desired option appears.

- > Press [FORCE]
- > Swipe or input account # and press [ENTER]
- > Choose from these options: [CREDIT] [DEBIT], if prompted
- > Input expiration date (MMYY) and press [ENTER] (manual sale only)
- > Choose Tran: [SALE] [PHONE] (manual sale only)
- > Imprint card and press [ENTER] (manual sale only)
- > Input last 4 digits of account # and press [ENTER] (swiped sale only)
- > Input server ID and press [ENTER], if prompted
- > Input \$ amount and press [ENTER]
- > Input authorization code and press [ENTER]
- > Print customer copy – [F1] for Yes or [F2] for No

Authorization Only

To scroll menu, press [↓] until desired option appears.

- > Press [AUTH ONLY]
- > Swipe or input account # and press [ENTER]
- > Choose from these options: [CREDIT] [DEBIT], if prompted
- > Input expiration date (MMYY) and press [ENTER] (manual sale only)
- > Input last 4 digits of account # and press [ENTER] (swiped sale only)
- > Input server ID and press [ENTER]
- > Input \$ amount and press [ENTER]
- > Print customer copy – [F1] for Yes or [F2] for No

Void

To scroll menu, press [↓] until desired option appears.

- > Press [VOID]
- > Void last transaction – [F1] for Yes or [F2] for No
- > Retrieve by: [INV #] or [ACCT#]
- > Input last 4 digits of account # or invoice # and press [ENTER]

Terminal Displays:

[NO] to cancel
[YES] to void
[NEXT] to scroll

- > Print customer copy – [F1] for Yes or [F2] for No

Credit Refund

To scroll menu, press [↓] until desired option appears.

- > Press [REFUND]
- > Input password and press [ENTER]
- > Swipe card or input account # and press [ENTER]
- > Select [CREDIT], if prompted
- > Input expiration date (MMYY) and press [ENTER] (manual sale only)
- > Input last 4 digits of account # and press [ENTER] (swiped sale only)
- > Input server ID and press [ENTER], if prompted
- > Input \$ amount and press [ENTER]
- > Input tip amount and press [ENTER]
- > Print customer copy – [F1] for Yes or [F2] for No

Debit Refund

To scroll menu, press [↓] until desired option appears.

- > Press [REFUND]
- > Input password and press [ENTER]
- > Swipe card and press [ENTER]
- > Select [DEBIT], if prompted
- > Input server ID and press [ENTER], if prompted
- > Input \$ amount and press [ENTER]
- > Input tip amount and press [ENTER]
- > Input original transaction date (MM/DD/YY)
- > Cardholder enters PIN and presses [ENTER]
- > Print customer copy – [F1] for Yes or [F2] for No

Tip Adjust

- > Press [TIP]
- > Input password and press [ENTER]
- > Retrieve by [CLRK] [AMNT] [ACCT#] or [INV #]
- > Input server ID, amount, last 4 digits of account # or invoice # and press [ENTER]
- > Select [ADJ] to adjust
- > Select [PREV] or [NEXT] to scroll
- > Select [EXIT] to exit tip adjust

If ADJ is selected:

- > Tip amount displays
- > Input new tip amount and press [ENTER]
- > Print customer copy – [F1] for Yes or [F2] for No, if prompted

Reports

- > Press [REPORTS]
 - > Press [↓] until desired report option appears
 - > Select report to print:
 - [TOTLS RPT] – prints a total report
 - [DETL RPT] – prints a detail report
 - [SERVR RPTS] – displays additional server options:
 - Press [ONE]; input server ID and press [ENTER]
- OR
- Press [ALL] to print all reports

Report(s) prints

Report Key:

- m = Manually keyed
- * = Trans. adjusted

NOTE: Default tip discount is 2% for fine dining. Contact Customer Service to change default tip amount.

Balance Inquiry

To scroll menu, press [↓] until desired option appears.

- > Press [BALANCE INQ]
- > Choose from these options:
 - [CURR] [PREV]
 - Select [CURR] for current batch
 - Select [PREV] for previous batch
- > The balance of the selected batch will display

Report prints

Batch Review

To scroll menu, press [↓] until desired option appears.

- > Press [BATCH REVIEW]
- > Input password and press [ENTER]
- > Retrieve by [CLRK] [AMNT] [ACCT#] or [INV #]
- > Input server ID, amount, last 4 digits of account # or invoice # and press [ENTER]
- > Select [ADJ] to adjust transaction
- > Select [VOID] to print receipt
- > Select [PREV] or [NEXT] to scroll

Settlement

To scroll menu, press [↓] until desired option appears.

- > Press [SETTLEMENT]
- > Input password and press [ENTER]
- > Displays totals
- > Confirm totals and press [ENTER]

Report prints

Open Tab

To scroll menu press [↓] until desired option appears.

- > Press [TAB]
- > Select [OPEN TAB]
- > Swipe or input account #, and press [ENTER]
- > Choose from these options:
 - [CREDIT] [DEBIT], if prompted
- > Input expiration date (MMYY) and press [ENTER] (manual sale only)
- > Input last 4 digits of account # and press [ENTER] (swiped sale only)
- > Input server ID and press [ENTER], if prompted
- > If desired Open Tab amount displays, press [ENTER]
- > If Open Tab amount is different than displayed amount, press the [BACK SPACE] to erase the amount, then input the new amount and press [ENTER]
- > Print customer copy – [F1] for Yes or [F2] for No, if prompted

Close Tab

To scroll menu press [↓] until desired option appears.

- > Press [TAB]
- > Select [CLOSE TAB]
- > Select the retrieval method:
 - Select [INV#] to retrieve the transaction invoice #, then input the invoice # of the Open Tab transaction, and press [ENTER]
 - Select [ACCT#] to retrieve the transaction by account #, then input the last 4 digits of the account # and press [ENTER]
- > The card # and amount displays
 - Select [NEXT] to scroll through other transactions in the batch if desired.
 - Select [NO] to return to the Tab menu
- > Select [YES] to close the Tab for the transaction that is displayed
 - If the Tab will be closed with the same card, select [YES]
 - If the Tab will be closed with a different card, select [NO], swipe the new card, input server # and press [ENTER]
- > Choose from these options: [CREDIT] [DEBIT], if prompted
- > Input expiration date (MMYY) and press [ENTER] (manual sale only)
- > Input last 4 digits of account # and press [ENTER] (swiped sale only)
- > Input new sale amount and press [ENTER]
- > Input tip amount and press [ENTER], if prompted
- > Print customer copy – [F1] for Yes or [F2] for No, if prompted

Delete Open Tab

To scroll menu press [↓] until desired option appears.

- > Press [TAB]
- > Select [DEL TAB]
- > Select the retrieval method:
 - Select [INV#] to retrieve the transaction by invoice #, then input the invoice # of the Open Tab transaction, and press [ENTER]
 - Select [ACCT#] to retrieve the transaction by account #, then input the last 4 digits of the account # and press [ENTER]
- > The card # and amount displays
 - Select [NEXT] to scroll through other transactions in the batch if desired
 - Select [NO] to return to the Tab menu
- > Select [YES] to delete the Open Tab for the transaction that is displayed

Cash Receipt

- > Press [9] and press [ENTER]
- > Input server # and press [ENTER], if prompted
- > Input \$ amount and press [ENTER]

Receipt prints

Processing Tips



= Enter or Yes



= Backspace



= Cancel or No

- > To scroll through the menu, press [MORE]
- > Press [3] multiple times until the paper advances to desired length

Vx610 Specific Functions

How to Power on:

- > Press and hold down [ENTER] until unit powers on

How to Power off:

- > Ensure power cord is not connected
- > Press and hold down [CANCEL] until unit powers off

NOTE: The terminal will go into sleep mode after 10 minute of inactivity. It will power off automatically after 30 minutes of inactivity.

Communication Status:



Wireless communication is being used



Dial communications is being used



Terminal's antenna is working properly and is connected to the wireless network



Terminal's antenna is unable to connect to the wireless network



Terminal's power cord is connected



Wireless signal strength is between 1% to 25%



Wireless signal strength is between 26% to 50%



Wireless signal strength is between 51% to 75%



Wireless signal strength is between 76% to 100%

Battery Status:



Battery level is below 10% capacity. Plug the unit into the power source to recharge



Empty Battery




Full Battery





Terminal Key Pad Display

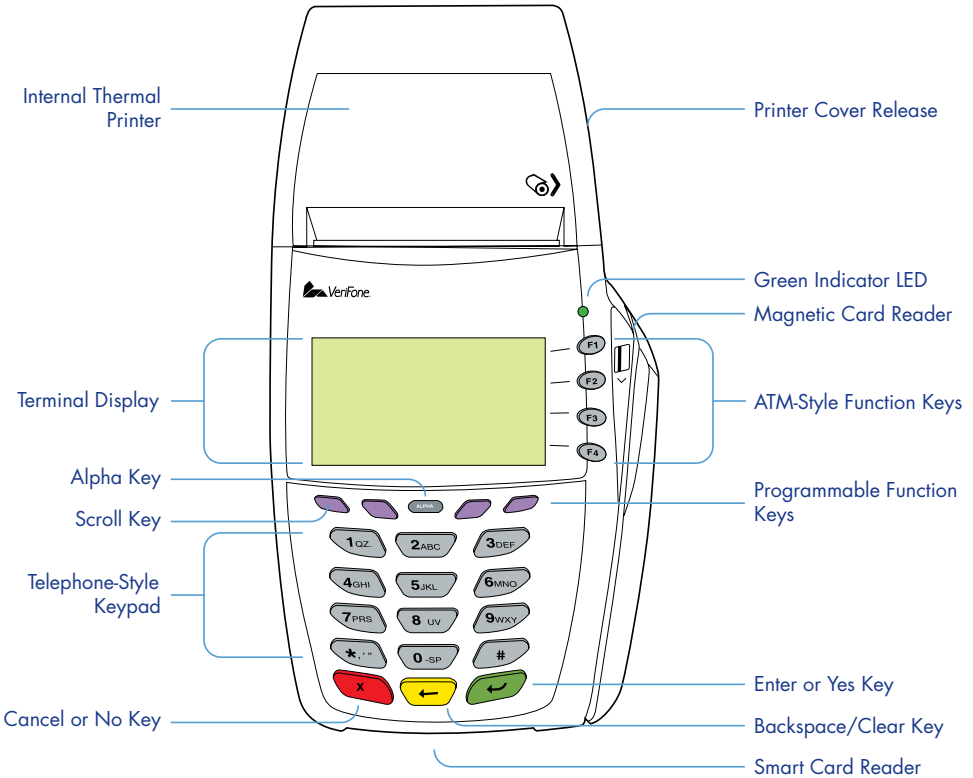

MerchantConnect

The Online Window To Your Payment Processing Account

MerchantConnect is your one-stop destination for online customer service. It contains everything you need to manage your electronic payment activity.

Getting Started Is: Fast, Easy, Secure & Free!
Go to www.MerchantConnect.com